

F1	F2	F3	F4	F5	F6	F7	MF9 40A F15-F21	F42	F44	F46	F48	F50	FL1 FLASHER UNIT						
F8	F9	F10	F11	F12	F13	F14	MF10 50A F22-F28	F43	F45	F47 F49 F51									
F15	F16	F17	F18	F19	F20	F21	MF11 40A F29-F35	D1	D2	F52	F54	F56		R14 AUTOSHIFT NEUTRAL SAFETY					
F22	F23	F24	F25	F26	F27	F28	MF12 NOT USED	R12 NOT USED		F53 F55 F57									
F29	F30	F31	F32	F33	F34	F35	MF13 40A T SIGNAL												
F36 F37 F38 F39 F40 F41							MF14 40A F52-F57	R13 INTERMIT WIPER (VOLVO)		F62 F64 F66 F63 F65 F67			DRL DAYTIME RUNNING LAMP MODULE						
							MF15 30A F42-F44,F58												
							MF16 NOT USED												
							R1 AUX LAMPS ENABLE	R2 TRAILER STOP LAMPS	R3 EMS POWER (VOLVO)	MF1 40A TRL AUX	F58	F60	B1-1 IGN (F46) 10A MAX	B2-1 BAT (F52) 10A MAX					
										MF2 30A F1-F7			B1-2 IGN (F47) 10A MAX	B2-2 BAT (F53) 10A MAX					
										MF3 40A F8-F14	F59	F61	B1-3 IGN (F48) 10A MAX	B2-3 BAT (F54) 10A MAX					
							PR1 ACC. POWER	PR2 IGNITION POWER	PR3 IGNITION POWER	MF4 NOT USED	D3	D4	B1-4 IGN (F49) 10A MAX	B2-4 BAT (F55) 10A MAX					
										MF5 40A CAB HEAT			B1-5 IGN (F50) 10A MAX	B2-5 NOT USED					
										MF6 40A PWR SEATS	R15 VEH STOP LAMPS		B1-6 IGN (F51) 10A MAX	B2-6 BATTERY LIFEGUARD					
							R4 NOT USED	R5 AUX LAMPS CHANGE OVER	R6 NOT USED	MF7 60A F46-F51	R16 DRL CONTROL								
										MF8 30A ABS SYS									
							R7 PARK BRAKE (VOLVO)	R8 CITY HORN	R9 ABS WARN LAMP	R10 CRTSY DOOR LAMPS	R11 ECM BRAKE INPUT	SEE TOP COVER FOR FUSES F1-F41 VOLVO/CUMMINS ENGINE							

ATING

VOLVO

20396530

SEE TOP COVER FOR FUSES F1-F41
VOLVO/CUMMINS ENGINE

VOLVO

20396530

1 VOLVO ENGINE ONLY
2 LIGHTNING ONLY
3 SIZE NOT TO EXCEED MAXIMUM RATING
4 VORAD ONLY